

Cassette	Function	Comments
FX-RTC	Clock function only	All FX series PCs
FX-RAM-8C	Clock + 8k steps RAM	(V2.1 and later)
FX-EEPROM-4C	Clock + 4k steps EEPROM	require battery back-up for RTC.
FX-EEPROM-8C	Clock + 8k steps EEPROM	

 When attaching or detaching the memory cassette, turn off the main unit power source. Raise the pull lever when attaching or detaching.

 RAM and EEPROM are not initialized. When used for the first time, the CPU error LED may flicker.
 Transfer or write a program directly, or write all NOP in on-line program mode using the FX-20P or FX-30P.

<<Clock cassette>> FX-RTC

- The calendar function for day, month, year, hour, minute and second is provided with leap year correction.
- The program memory is that of the main unit.
- For details, see the FX-series Documentation.
- <<RAM cassette>> FX-RAM-8C (with clock function)
 - If a RAM cassette is removed from the main unit, the program content is lost.
 - The life of F2-40BL lithium battery built in the main unit is about 5 years. When FX-RAM-8C is used, the life becomes about 3 years.
- <<EEPROM cassette>> FX-EEPROM-4C, 8C (with clock function)
 - After program transfer or write, be sure to verify and check. If an error is found, transfer and verify again.
 - When writing a program, turn OFF the memory protect switch, but keep it in the ON position during ordinary operation.

April 2015 JY992D45901E



原产地 日本国 合格证 Made in Japan MITSUBISHI ELECTRIC

Attention •This product is designed for use in industrial applications.		
Note • Manufactured by: Mitsubishi Electric Corporation 2-7-3 Marunouchi, Chiyoda-ku, Tokyo, 100-8310 Japan		
•Authorized Representative in the European Community: Mitsubishi Electric Europe B.V. Gothaer Str. 8, 40880 Ratingen, Germany		