

**PROGRAMMABLE CONTROLLERS
MELSEC-F**


FX₂N-CNV-BC CABLE ADAPTER USER'S GUIDE

Introduction

The FX₂N-CNV-BC cable adapter is for the connection of FX₀N, FX₂N series programmable controllers (main unit, extension unit) to FX₀N, FX₂N series extension block or special function using the FX₀N-65EC (650mm, 25.6"). The following explains the cable configuration and connection method.

Further information can be found in the FX₀N, FX₂N SERIES HARDWARE MANUAL and FX₀N-65EC USER'S GUIDE.


External Dimensions

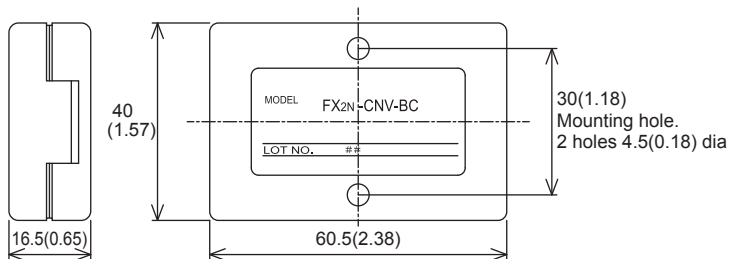

Dimensions : mm (inches)


Cable Configuration


The practice of connecting multiple extension cables and FX₂N-CNV-BC on one FX₀N / FX₂N system is not recommended.

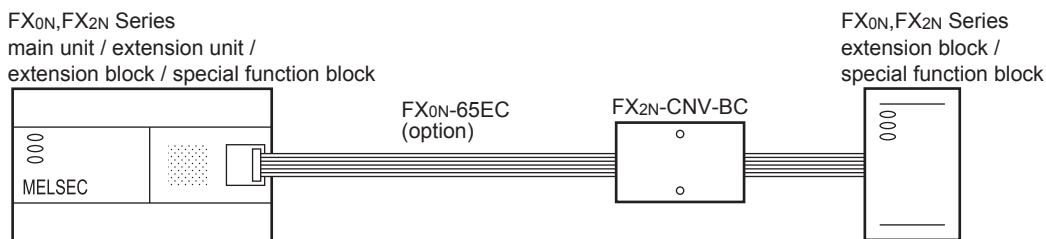

Connecting the Cables

Turn off the power of the programmable controller, and mount the FX₂N-CNV-BC using the following procedure.

- ① Separate the case to 2 parts.
- ② Connect the connectors to extension cables.
 Be careful of which way around the FX₀N-65EC cable is connected as it is possible that the FX₂N-CNV-BC case can not be closed.
- ③ Combine the case.
- ④ Mount the case using M4(0.16") screws.

 The practice of laying cables well away from power lines should be observed.

When using the FX₂N-CNV-BC a half twist will appear in the cable.

