

JY992D66601A

DATE: JUNE 1997 PAGE: 1 OF 1


# FX2N-CNV-BC CABLE ADAPTER USER'S GUIDE

#### Introduction

The FX2N-CNV-BC cable adapter is for the connection of FX0N, FX2N series programmable controllers (main unit, extension unit) to FX<sub>0N</sub>, FX2N series extension block or special function using the FX<sub>0N</sub>-65EC (650mm,25.6"). The following explains the cable configuration and connection method.

Further information can be found in the FXoN, FX2N SERIES HARDWARE MANUAL and FXoN-65EC USER'S GUIDE.


#### **External Dimensions**

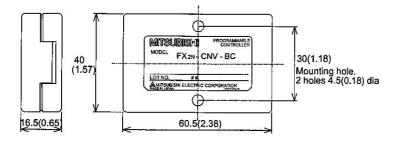

Dimensions: mm (inches)

## **Cable Configuration**

The practice of connecting multiple extension cables and FX<sub>2N</sub>-CNV-BC on one FX<sub>0N</sub> / FX<sub>2N</sub> system is not recommended.

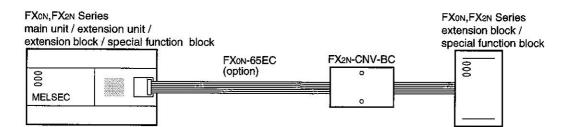

### **Connecting the Cables**

Turn off the power of the programmable controller, and mount the FX2N-CNV-BC using the following procedure.

- Separate the case to 2 parts.
- ② Connect the connectors to extension cables.

 $\triangle$ 

Be careful of which way around the FX<sub>0N</sub>-65EC cable is connected as it is possible that the FX<sub>2N</sub>-CNV-BC case can not be closed.

- 3 Combine the case.
- Mount the case using M4(0.16") screws.

The practice of laying cables well away from power lines should be observed.

When using the FX2N-CNV-BC a half twist will appear in the cable.

