# OMRON

Guard Lock Safety-door Switch D4SL



World Smallest Class









Connector Type Terminal Block Type








World Smallest Class 6-contact Guard Lock Safety-door Switch

Achieved world smallest class with easily selectable wiring method and metal-head robustness




# **Conveniently Selectable Wiring Method**

Two types of wiring methods are available to shorten wiring work time and prevent miswiring. Use of the "connector type" with the corresponding connector cable provides speedy maintenance and prevents miswiring. The "terminal block type" comprises a detachable terminal block, significantly increasing wiring efficiency.

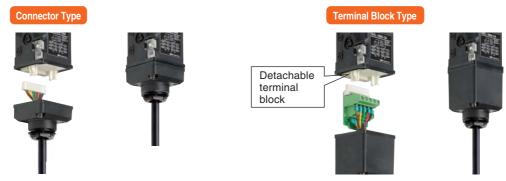

\* Connector cables are not included with the connector type and are to be purchased separately.

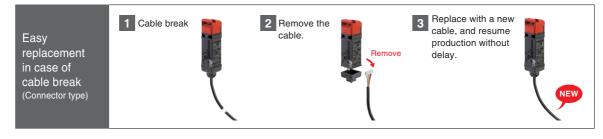




# **Adopting Metal Head**

The head is designed with strong and durable materials, able to withstand prolonged use in the workplace.

To prepare for any unforeseeable circumstances, a key holding force of 1,300 N (min.) has been achieved. This has increased the range of possible applications.

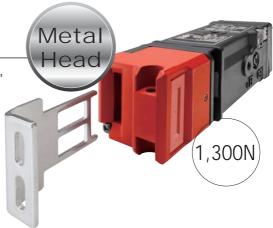

# **Wide Key Slot**


Even when the door is unstable, the wide key slot provides easier insertion than prior models.





# **Wide Variety of Mounting Methods**

The switch can be mounted in four directions by rotating the dedicated spacer. Mounting screws can be inserted 4-directionally, enabling mounting on a wider range of surfaces. Thus saving time and effort over the prior mounting method.

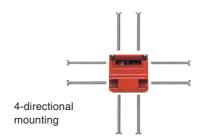



Front mounting



Pull out



Rotate 90°



\* Three screws are needed for side mounting.

# **Easy View LED Indicators**

With the two LED indicators, switch status can be checked from any direction.






#### **Merits of 6-contact Models**


The safety circuit comprises of four contacts and of two contacts used for monitoring. Door open/closed status and lock status can be monitored.



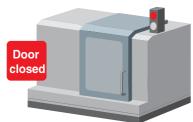





Monitors if the door is open.

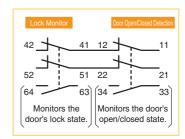










Monitors if the door lock is released.



# **Wide Variety of Operation Keys**

Within the selection are keys with shock and vibration resistant properties and a single adjustable type.

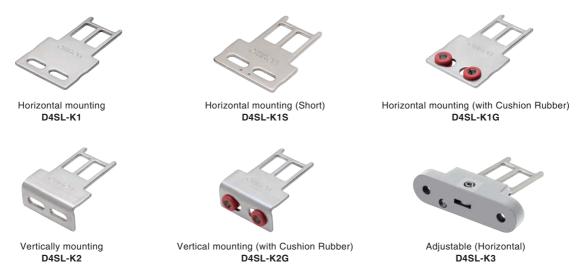



#### **Accessories for Room Access Control**

Door mounting accessories for D4SL are provided to prevent an operator becoming trapped inside the hazardous area by using a lockout key. In combination with A22TK, a safe environment can be kept during maintenance inside the hazardous area.



# **Guard Lock Safety-door Switch**

# D4SL

# World's Smallest Class 6-contact Guard Lock Safety-door Switch

- Two types are available: a connector type that reduces wiring time and a detachable terminal block type.
- Robust and durable metal head.
- Key holding force of 1,300 N.
- The wider key slot is less susceptible to movement from doors, and can handle doors with a small radius.
- By rotating the mounting part, it is possible, both to change the key insertion point and to enable mounting on various devices.
- Easy view LED indicators can be checked from any direction.
- By utilizing the 6-contact type, both the door open/closed status and the solenoid ON/OFF status can be monitored independently.
- A cost-effective 5-contact model is also available.



Connector Type

**Terminal Block Type** 



Be sure to read the "Safety Precautions" on page 25.

#### **Model Number Structure**

#### **Model Number Legend**

Switch (Standard type)

#### 1. Conduit Size

2: G1/2 (1 conduit)

3: 1/2-14NPT (1 conduit) \*1

4: M20 (1 conduit)

#### 2. Built-in Switch \*2

#### 5-contact Model

J: 1NC/1NO + 2NC/1NO

K: 1NC/1NO + 3NC

L: 2NC + 2NC/1NO

M: 2NC + 3NC

#### 6-contact Model

N: 2NC/1NO + 2NC/1NO

P: 2NC/1NO + 3NC

Q: 3NC + 2NC/1NO

R: 3NC + 3NC

#### 3. Head Material

D: Metal

#### 4. Door Lock and Release

A: Mechanical lock/

24 VDC solenoid release

G: 24 VDC solenoid lock/ mechanical release

#### 5. Indicator

D: 24 VDC (orange LED indicator)

#### 6. Release Key Type

Blank : Standard release key (resin)

4 : Special release key (resin)

(Note: Release keys are provided.)

#### 7. Connection Method

Blank : Terminal block N: Connector \*3

\*1. M20, includes M20-to-1/2-14NPT conversion adapter.

\*2. If a current is detected in the solenoid lock model (built-in switches; N,P,Q,R), before the door is closed, the door will remain unlocked. Be sure to close the door before turning ON the solenoid.

\*3. Connector cables are not included with the connector type and are to be purchased separately.

#### Switch (Metallic release key type)

1234567

#### 1. Conduit Size

2: G1/2 (1 conduit)

4: M20 (1 conduit)

#### 2. Built-in Switch \*2

#### 6-contact Model

N: 2NC/1NO + 2NC/1NO

P: 2NC/1NO + 3NC

Q: 3NC + 2NC/1NO

R: 3NC + 3NC

3. Head Material

D: Metal

#### 4. Door Lock and Release

A: Mechanical lock/

24 VDC solenoid release

G: 24 VDC solenoid lock/

mechanical release

5. Indicator

D: 24 VDC (orange LED indicator)

6. Release Key Type

Blank: Standard release key (Metal)

7. Connection Method

Blank: Terminal block

N: Connector \*3

**\*1.** M20, includes M20-to-1/2-14NPT conversion adapter.

\*2. If a current is detected in the solenoid lock model (built-in switches; N,P,Q,R), before the door is closed, the door will remain unlocked. Be sure to close the door before turning ON the solenoid.

\*3. Connector cables are not included with the connector type and are to be purchased separately.

#### **Operation Key**

D4SL-K□□ 1 2

#### 1. Operation Key Type

1: Horizontal mounting

2: Vertical mounting

3: Adjustable mounting (horizontal)

#### 2. Key Type

Blank: No cushion rubber

G: Cushion rubber

S: No cushion rubber, short type

#### D4SL

# **Ordering Information**

# Mechanical lock/24 VDC solenoid release (G1/2, M20 conduit type)

List of Models (Operation Keys are sold separately.)

Release key type	Wiring method	Solenoid voltage/ Indicator	Lock and release type	Contact configuration (door open/closed detection switch and lock monitor switch contacts)	Conduit size	Model
				2NC/1NO + 2NC/1NO	G1/2	D4SL-2NDA-DN
				2NG/1NG + 2NG/1NG	M20	D4SL-4NDA-DN
				2NC/1NO + 3NC	G1/2	D4SL-2PDA-DN
	Connector			2140/1140 + 3140	M20	D4SL-4PDA-DN
	Connector			3NC + 2NC/1NO	G1/2	D4SL-2QDA-DN
				5140 + 2140/ 1140	M20	D4SL-4QDA-DN
				3NC + 3NC	G1/2	D4SL-2RDA-DN
Standard				CIVE I CIVE	M20	D4SL-4RDA-DN
(resin)				2NC/1NO + 2NC/1NO	G1/2	D4SL-2NDA-D
				2110/1110 1 2110/1110	M20	D4SL-4NDA-D
				2NC/1NO + 3NC	G1/2	D4SL-2PDA-D
	Terminal			2110/1110 1 6110	M20	D4SL-4PDA-D
	block			3NC + 2NC/1NO	G1/2	D4SL-2QDA-D
				5110 1 2110/1110	M20	D4SL-4QDA-D
				3NC + 3NC	G1/2	D4SL-2RDA-D
				3110 + 3110	M20	D4SL-4RDA-D
	Connector  Terminal block			2NC/1NO + 2NC/1NO	G1/2	D4SL-2NDA-D4N *1
					M20	D4SL-4NDA-D4N *1
		24 VDC Orange		2NC/1NO + 3NC 3NC + 2NC/1NO	G1/2	D4SL-2PDA-D4N *1
					M20	D4SL-4PDA-D4N *1
			Mechanical lock		G1/2	D4SL-2QDA-D4N *1
				3140 + 2140/ 1140	M20	D4SL-4QDA-D4N *1
Special release key (resin)				3NC + 3NC	G1/2	D4SL-2RDA-D4N *1
					M20	D4SL-4RDA-D4N *1
			Solenoid release	2NC/1NO + 2NC/1NO	G1/2	D4SL-2NDA-D4 <b>*1</b>
			Telease	2.10, 1110 1 2.10, 1110	M20	D4SL-4NDA-D4 <b>*1</b>
				2NC/1NO + 3NC	G1/2	D4SL-2PDA-D4 *1
				2110/1110 + 3110	M20	D4SL-4PDA-D4 *1
		ock		3NC + 2NC/1NO	G1/2	D4SL-2QDA-D4 *1
					M20	D4SL-4QDA-D4 <b>*1</b>
				3NC + 3NC	G1/2	D4SL-2RDA-D4 <b>*1</b>
					M20	D4SL-4RDA-D4 *1
				2NC/1NO + 2NC/1NO	G1/2	D4SL-2NDA-DN-SJ *2
				2.10,1110 / 2.10,1110	M20	D4SL-4NDA-DN-SJ *2
				2NC/1NO + 3NC	G1/2	D4SL-2PDA-DN-SJ *2
	Connector			2110, 1110	M20	D4SL-4PDA-DN-SJ *2
	Comicolor			3NC + 2NC/1NO	G1/2	D4SL-2QDA-DN-SJ *2
				5110 1 2110/1110	M20	D4SL-4QDA-DN-SJ *2
				3NC + 3NC	G1/2	D4SL-2RDA-DN-SJ *2
Standard				SIVE + SIVE	M20	D4SL-4RDA-DN-SJ *2
(Metal)				2NC/1NO + 2NC/1NO	G1/2	D4SL-2NDA-D-SJ *2
				2110/1110 + 2110/1110	M20	D4SL-4NDA-D-SJ *2
				2NC/1NO + 3NC	G1/2	D4SL-2PDA-D-SJ *2
	Terminal			2110/1110 + 3110	M20	D4SL-4PDA-D-SJ *2
	block			3NC + 2NC/1NO	G1/2	D4SL-2QDA-D-SJ *2
				SINC + ZINC/TINC	M20	D4SL-4QDA-D-SJ *2
				SNC - SNC	G1/2	D4SL-2RDA-D-SJ *2
				3NC + 3NC	M20	D4SL-4RDA-D-SJ *2

Note: The recommended models for equipment and machinery being exported to Europe are those with an M20 conduit sizes, and for North America, the recommended models are those with a 1/2-14NPT conduit sizes.

<sup>\*1.</sup> Models with Korean S-mark certification.

<sup>\*2.</sup> These models will receive Korean S-mark certification.

# 24 VDC solenoid lock/Mechanical release (G1/2, M20 conduit type)

List of Models (Operation Keys are sold separately.)

Release key type	Wiring method	Solenoid voltage/ Indicator	Lock and release type	Contact configuration (door open/closed detection switch and lock monitor switch contacts)	Conduit size	Model
				410/410 010/410	G1/2	D4SL-2JDG-DN
				1NC/1NO + 2NC/1NO	M20	D4SL-4JDG-DN
				1NC/1NO - 2NC	G1/2	D4SL-2KDG-DN
				1NC/1NO + 3NC	M20	D4SL-4KDG-DN
				2NC + 2NC/1NO	G1/2	D4SL-2LDG-DN
				ZINC + ZINC/ TINO	M20	D4SL-4LDG-DN
				2NC + 3NC	G1/2	D4SL-2MDG-DN
	Connector			ZINC + SINC	M20	D4SL-4MDG-DN
	Connector			2NC/1NO + 2NC/1NO	G1/2	D4SL-2NDG-DN
				2NC/1NO + 2NC/1NO	M20	D4SL-4NDG-DN
				2NC/1NO + 3NC	G1/2	D4SL-2PDG-DN
				2NC/TNO + 3NC	M20	D4SL-4PDG-DN
		24 VDC Orange		3NC + 2NC/1NO	G1/2	D4SL-2QDG-DN
					M20	D4SL-4QDG-DN
				3NC + 3NC	G1/2	D4SL-2RDG-DN
Standard			Solenoid lock/ Mechanical		M20	D4SL-4RDG-DN
(resin)			release	1NC/1NO + 2NC/1NO	G1/2	D4SL-2JDG-D
					M20	D4SL-4JDG-D
				1NC/1NO + 3NC	G1/2	D4SL-2KDG-D
					M20	D4SL-4KDG-D
				2NC + 2NC/1NO	G1/2	D4SL-2LDG-D
				2NC + 2NC/ INO	M20	D4SL-4LDG-D
				2NC + 3NC	G1/2	D4SL-2MDG-D
	Terminal			ZINO + SINO	M20	D4SL-4MDG-D
	block			2NC/1NO + 2NC/1NO	G1/2	D4SL-2NDG-D
				ZINO/ IINO + ZINO/ IINO	M20	D4SL-4NDG-D
				2NC/1NO + 3NC	G1/2	D4SL-2PDG-D
				2NO/ 1NO + 3NO	M20	D4SL-4PDG-D
				3NC + 2NC/1NO	G1/2	D4SL-2QDG-D
				3140 + 2140/1140	M20	D4SL-4QDG-D
				3NC + 3NC	G1/2	D4SL-2RDG-D
				SINC + SINC	M20	D4SL-4RDG-D

Note: The recommended models for equipment and machinery being exported to Europe are those with an M20 conduit sizes, and for North America, the recommended models are those with a 1/2-14NPT conduit sizes.

# 24 VDC solenoid lock/Mechanical release (G1/2, M20 conduit type)

List of Models (Operation Keys are sold separately.)

Release key type	Wiring method	Solenoid voltage/ Indicator	Lock and release type	Contact configuration (door open/closed detection switch and lock monitor switch contacts)	Conduit size	Model	
				1NC/1NO + 2NC/1NO	G1/2	D4SL-2JDG-D4N	
				1110/1110 + 2110/1110	M20	D4SL-4JDG-D4N	
				1NC/1NO + 3NC	G1/2	D4SL-2KDG-D4N	
				TNC/TNO + SNC	M20	D4SL-4KDG-D4N	
				2NC + 2NC/1NO	G1/2	D4SL-2LDG-D4N	
				ZINC + ZINC/ TINO	M20	D4SL-4LDG-D4N	
Special				ONC - ONC	G1/2	D4SL-2MDG-D4N	
	Connector			2NC + 3NC	M20	D4SL-4MDG-D4N	
	Connector			ONO/4NO - ONO/4NO	G1/2	D4SL-2NDG-D4N *1	
				2NC/1NO + 2NC/1NO	M20	D4SL-4NDG-D4N *1	
				ONIC/4NIC - ONIC	G1/2	D4SL-2PDG-D4N *1	
				2NC/1NO + 3NC	M20	D4SL-4PDG-D4N *1	
				ONIO ONIO (ANIO	G1/2	D4SL-2QDG-D4N *1	
				3NC + 2NC/1NO	M20	D4SL-4QDG-D4N *1	
0				2112	G1/2	D4SL-2RDG-D4N *1	
release				3NC + 3NC	M20	D4SL-4RDG-D4N *1	
key		=			G1/2	D4SL-2JDG-D4	
(resin)				1NC/1NO + 2NC/1NO	M20	D4SL-4JDG-D4	
				1NC/1NO + 3NC	G1/2	D4SL-2KDG-D4	
					M20	D4SL-4KDG-D4	
		24 VDC Orange		2NC + 2NC/1NO	G1/2	D4SL-2LDG-D4	
					M20	D4SL-4LDG-D4	
	Terminal block				G1/2	D4SL-2MDG-D4	
			Solenoid lock/	2NC + 3NC	M20	D4SL-4MDG-D4	
			Mechanical release	2NC/1NO + 2NC/1NO	G1/2	D4SL-2NDG-D4 *1	
			release		M20	D4SL-4NDG-D4 <b>*1</b>	
					G1/2	D4SL-2PDG-D4 *1	
				2NC/1NO + 3NC	M20	D4SL-4PDG-D4 *1	
					G1/2	D4SL-2QDG-D4 *1	
				3NC + 2NC/1NO	M20	D4SL-4QDG-D4 *1	
					G1/2	D4SL-2RDG-D4 *1	
				3NC + 3NC	M20	D4SL-4RDG-D4 *1	
		-			G1/2	D4SL-2NDG-DN-SJ *2	
				2NC/1NO + 2NC/1NO	M20	D4SL-4NDG-DN-SJ *2	
					G1/2	D4SL-2PDG-DN-SJ *2	
				2NC/1NO + 3NC	M20	D4SL-4PDG-DN-SJ *2	
	Connector				G1/2	D4SL-2QDG-DN-SJ *2	
				3NC + 2NC/1NO	M20	D4SL-4QDG-DN-SJ *2	
					G1/2	D4SL-2RDG-DN-SJ *2	
Standard				3NC + 3NC	M20	D4SL-4RDG-DN-SJ *2	
(Metal)		1		1	G1/2	D4SL-2NDG-D-SJ *2	
, ,				2NC/1NO + 2NC/1NO	M20	D4SL-4NDG-D-SJ *2	
					G1/2	D4SL-2PDG-D-SJ *2	
	Terminal			2NC/1NO + 3NC	M20	D4SL-4PDG-D-SJ *2	
	block				G1/2	D4SL-2QDG-D-SJ *2	
				3NC + 2NC/1NO	M20	D4SL-4QDG-D-SJ *2	
					G1/2	D4SL-2RDG-D-SJ *2	
				3NC + 3NC	M20	D4SL-4RDG-D-SJ *2	
			1	hinery being exported to Furone are the			

Note: The recommended models for equipment and machinery being exported to Europe are those with an M20 conduit sizes, and for North America, the recommended models are those with a 1/2-14NPT conduit sizes.

<sup>\*1.</sup> Models with Korean S-mark certification.

<sup>\*2.</sup> These models will receive Korean S-mark certification.

#### Mechanical lock/24 VDC solenoid release (1/2-14NPT conduit type)

List of Models (Operation Keys are sold separately.)

Release key type	Wiring method	Solenoid voltage/ Indicator	Lock and release type	Contact configuration (door open/closed detection switch and lock monitor switch contacts)	Conduit size	Model (Available soon)
				2NC/1NO + 2NC/1NO		D4SL-3NDA-DN
	Connector			2NC/1NO + 3NC		D4SL-3PDA-DN
	Connector			3NC + 2NC/1NO		D4SL-3QDA-DN
Standard (resin)				3NC + 3NC		D4SL-3RDA-DN
	Terminal block	24 VDC Orange		2NC/1NO + 2NC/1NO	1/2-14NPT	D4SL-3NDA-D
				2NC/1NO + 3NC		D4SL-3PDA-D
				3NC + 2NC/1NO		D4SL-3QDA-D
				3NC + 3NC		D4SL-3RDA-D
	Connector			2NC/1NO + 2NC/1NO		D4SL-3NDA-D4N *
				2NC/1NO + 3NC		D4SL-3PDA-D4N *
Special	Connector			3NC + 2NC/1NO		D4SL-3QDA-D4N *
release				3NC + 3NC		D4SL-3RDA-D4N *
key				2NC/1NO + 2NC/1NO		D4SL-3NDA-D4 *
(resin)	Terminal			2NC/1NO + 3NC		D4SL-3PDA-D4 *
	block			3NC + 2NC/1NO		D4SL-3QDA-D4 *
				3NC + 3NC		D4SL-3RDA-D4 *

Note: The recommended models for equipment and machinery being exported to North America are those with a 1/2-14NPT conduit sizes. \*These models will receive Korean S-mark certification.

#### 24 VDC solenoid lock/Mechanical release (1/2-14NPT conduit type)

List of Models (Operation Keys are sold separately.)

Release key type	Wiring method	Solenoid voltage/ Indicator	Lock and release type	Contact configuration (door open/closed detection switch and lock monitor switch contacts)	Conduit size	Model (Available soon)
				1NC/1NO + 2NC/1NO		D4SL-3JDG-DN
				1NC/1NO + 3NC		D4SL-3KDG-DN
				2NC + 2NC/1NO		D4SL-3LDG-DN
	Connector			2NC + 3NC		D4SL-3MDG-DN
	Connector			2NC/1NO + 2NC/1NO		D4SL-3NDG-DN
				2NC/1NO + 3NC		D4SL-3PDG-DN
				3NC + 2NC/1NO		D4SL-3QDG-DN
Standard				3NC + 3NC		D4SL-3RDG-DN
(resin)				1NC/1NO + 2NC/1NO		D4SL-3JDG-D
				1NC/1NO + 3NC		D4SL-3KDG-D
	Terminal block  Connector	24 VDC Orange		2NC + 2NC/1NO		D4SL-3LDG-D
				2NC + 3NC	1/2-14NPT	D4SL-3MDG-D
				2NC/1NO + 2NC/1NO		D4SL-3NDG-D
			Solenoid lock/ Mechanical	2NC/1NO + 3NC		D4SL-3PDG-D
				3NC + 2NC/1NO		D4SL-3QDG-D
				3NC + 3NC		D4SL-3RDG-D
			release	1NC/1NO + 2NC/1NO		D4SL-3JDG-D4N
				1NC/1NO + 3NC		D4SL-3KDG-D4N
				2NC + 2NC/1NO		D4SL-3LDG-D4N
				2NC + 3NC		D4SL-3MDG-D4N
				2NC/1NO + 2NC/1NO		D4SL-3NDG-D4N *
				2NC/1NO + 3NC		D4SL-3PDG-D4N *
Special				3NC + 2NC/1NO		D4SL-3QDG-D4N *
release				3NC + 3NC		D4SL-3RDG-D4N *
key				1NC/1NO + 2NC/1NO		D4SL-3JDG-D4
(resin)				1NC/1NO + 3NC		D4SL-3KDG-D4
				2NC + 2NC/1NO		D4SL-3LDG-D4
	Terminal			2NC + 3NC		D4SL-3MDG-D4
	block			2NC/1NO + 2NC/1NO		D4SL-3NDG-D4 *
				2NC/1NO + 3NC		D4SL-3PDG-D4 *
				3NC + 2NC/1NO		D4SL-3QDG-D4 *
				3NC + 3NC		D4SL-3RDG-D4 *

Note: The recommended models for equipment and machinery being exported to North America are those with a 1/2-14NPT conduit sizes. \*These models will receive Korean S-mark certification.

#### D4SL

#### **Operation Keys**

Туре	Model
Horizontal mounting	D4SL-K1
Horizontal mounting (Short)	D4SL-K1S
Horizontal mounting (Cushion rubber)	D4SL-K1G
Vertical mounting	D4SL-K2
Horizontal mounting (Cushion rubber)	D4SL-K2G
Adjustable (Horizontal)	D4SL-K3

#### **Connector Cables**

Туре	Model
1m	D4SL-CN1
3m	D4SL-CN3
5m	D4SL-CN5

#### Slide Key

Туре	Model
	D4SL-SK10-LK
	D4SL-SK10-LKH
	D4SL-SK10H *

<sup>\*</sup>The inner lever for D4GL-SK10/D4SL-SK10 that can not be used for other products and applications.

Please refer to the D4SL-mounting Slide Key D4SL-SK10-LK/-LKH Catalogue (C144) for details.

#### **Specifications**

#### Standards and EC Directives

#### Conforms to the following EC Directives:

- · Machinery Directive
- · Low Voltage Directive
- EMC Directive
- EN1088
- EN60204-1
- GS-ET-19

#### Certified Standards Standard type

Certification body	Standard	File No.
TÜV SÜD	EN60947-5-1 (certified direct opening)	Consult your OMRON representative for details.
UL <b>*1</b>	UL508, CSA C22.2 No.14	E76675
CQC(CCC)	GB14048.5	pending
KOSHA *2	EN60947-5-1	2008-188

\*1. Certification for CSA C22.2 No. 14 is authorized by the UL mark. \*2. Only certain models have been certified.

#### Metallic release key type

Certification body	Standard	File No.	
TÜV SÜD	EN60947-5-1 (certified direct opening)	Consult your OMRON representative for details.	
KOSHA	EN60947-5-1	Pending	

#### **Certified Standard Ratings**

#### TÜV(EN60947-5-1)

Item Utilization category	AC-15	DC-13
Rated operating current (le)	1.5A	0.22A
Rated operating current (Ue)	120V	125V

**Note:** Use a 4 A fuse that conforms to IEC60127 as a short-circuit protection device. This fuse is not included with the switch.

#### UL/CSA (UL508, CSA C22.2 No. 14) C150

Rated voltage	Carry	Curre	ent (A)	Volt-amperes (VA)		
voitage	current	Make	Break	Make	Break	
120 VAC	2.5A	15	1.5	1,800	180	

#### R150

Rated voltage	Carry current	Current (A)		Volt-ar (V	•
voitage	Current	Make	Break	Make	Break
125 VDC	1.0A	0.22	0.22	28	28

#### **Solenoid Coil Characteristics**

Item Type	24 VDC
Rated operating voltage (100% ED)	24 VDC +10% -15%
Current consumption *	Power ON: Approx. 34 W at 1.4 A Constant: Approx. 2.6 W (average) at 0.4 A (max.)
Insulation	Class E (120°C max.)

\*A starting current is applied to the solenoid for a maximum of one second.

After this, the internal circuit switches to a constant current.

#### Indicator

Item Type	LED type
Rated voltage	24 VDC
Current consumption	Approx. 10 mA
Color (LED)	Orange

#### **Characteristics**

Degree of protection *1		IP67 (EN60947-5-1)
Durability	Mechanical	1,000,000 operations min.
*2	Electrical	150,000 operations min. (1A resistance at 125VAC) *3
Operating sp		0.05 to 1 m/s
Operating fre	equency	5 operations minute max.
Direct openii	ng force *4	60 N min. (EN60947-5-1)
Direct openii	ng travel <b>*</b> 4	15 mm min. (EN60947-5-1)
Holding force	e <b>*</b> 5	1,300 N min.
Contact resis	stance	200 mΩ max.
Minimum app	plicable load	1 mA resistive load at 5 VDC (N-level reference value)
Rated insulation	n voltage (Ui)	150V (EN60947-5-1)
Rated freque	ency	50/60 Hz
Protection ag		Class II (double insulation)
Pollution deg (operating er		3 (EN60947-5-1)
	Between terminals of same polarity	1.5 kV
Impulse withstand voltage	Between terminals of different polarity	1.5 kV
(EN60947-5-1)	Between other terminals and non-current carrying metallic parts	2.5 kV
Insulation re	sistance	100 Ω min. (at 500 VDC)
Vibration resistance	Malfunction	10 to 55 Hz, 0.75 mm single amplitude
Shock	Malfunction	100 m/s <sup>2</sup> min.
resistance	Destruction	1,000 m/s <sup>2</sup> min.
Conditional short-circuit current  Conventional free air thermal current (Ith)  Ambient operating temperature		100 A (EN60947-5-1)
		2.5 A (EN60947-5-1)
		-10 to 55°C (with no icing)
Ambient operations humidity		95% max.
Weight		Approx. 360 g (Connector model) Approx. 390 g (Terminal block model)

Note: 1. The above values are initial values.

The Switch contacts can be used with either standard loads or microloads. Once the contacts have been used to switch a load, however, they cannot be used to switch smaller loads.

The contact surfaces will become rough once they have been used and contact reliability for smaller loads may be reduced.


\*1. The degree of protection is tested using the method specified by the standard (EN60947-5-1). Confirm that sealing properties are sufficient for the operating conditions and environment beforehand.

Although the switch box is protected from dust, oil or water penetration, do not use the D4SL in places where cutting chips, oil, water or chemicals may enter through the key hole on the head, otherwise Switch damage or malfunctioning may occur.

- **\*2.** The durability is for an ambient temperature of 5 to 35°C and an ambient humidity of 40% to 70%. For more details, consult your OMRON representative.
- **\*3.** Do not pass the 1 A, 125 VAC load through more than 3 circuits.
- \*4. These figures are minimum requirements for safe operation.
- **\*5.** This figure is based on the GS-ET-19 evaluation method.
- \*6. This value will vary with the switching frequency, environment, and reliability level. Confirm that correct operation is possible with the actual load beforehand.

#### **Connections**

#### Internal Circuit Diagram




#### **Circuit Connection Example**

- Do not switch circuits for three or more standard loads at the same time.
  - Doing so may adversely affect insulation performance.
- DC solenoids have polarity. (E1: Positive, E2: Negative)
   Confirm terminal polarity before wiring.


#### Connection Example for D4SL-□JDG

 Terminals 12-41 are connected internally and so connect terminals 11-42 for safety-circuit input. (BIA GS-ET-19)

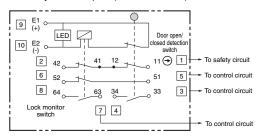


#### Connection Example for D4SL-□KDG

 Terminals 12-41 are connected internally and so connect terminals 11-42 for safety-circuit input. (BIA GS-ET-19)

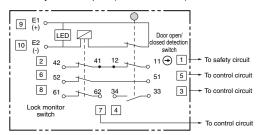


#### Connection Example for D4SL-□LDG

 Terminals 12-41 are connected internally and so connect terminals 11-42 for safety-circuit input. (BIA GS-ET-19)

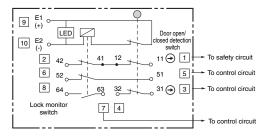


#### Connection Example for D4SL-□MDG

 Terminals 12-41 are connected internally and so connect terminals 11-42 for safety-circuit input. (BIA GS-ET-19)

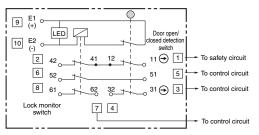


#### Connection Example for D4SL-□NDA and D4SL-□NDG

 Terminals 12- 41, and 22- 51 are connected internally and so connect terminals 11-42, and 21-52 for safety-circuit input. (BIA GS-ET-19)

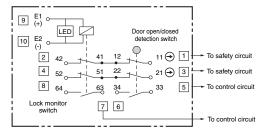


#### Connection Example for D4SL-□PDA and D4SL-□PDG

 Terminals 12-41, and 22-51 are connected internally and so connect terminals 11-42, and 21-52 for safety-circuit input. (BIA GS-ET-19)

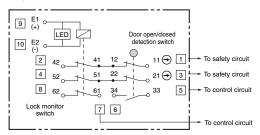


#### Connection Example for D4SL-□QDA and D4SL-□QDG

 Terminals 12-41, and 22-51 are connected internally and so connect terminals 11-42, and 21-52 for safety-circuit input. (BIA GS-ET-19)

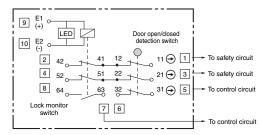

#### Connection Example for D4SL-□RDA and D4SL-□RDG

 Terminals 12-41, and 22-51 are connected internally and so connect terminals 11-42, and 21-52 for safety-circuit input. (BIA GS-ET-19)

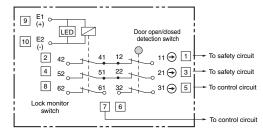


#### **Structure and Nomenclature**

#### **Structure**


#### D4SL-□□D□-D4N Connector Model

# The switch has a release key on the back of the switch as well. Can be mounted from four directions. The switch has an indicator on the back of the switch as well.

#### D4SL-□□D□-D4 Terminal Block Model

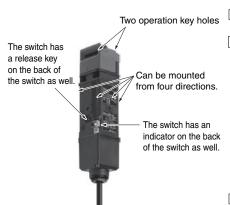


#### D4SL-□NDA and D4SL-□NDG



**Note:** Numbers inside the boxes are terminal numbers printed on the product.

#### D4SL-□JDG



**Note:** Numbers inside the boxes are terminal numbers printed on the product.

#### **Contact Form**


Indicates conditions where the Key is inserted and the lock is applied. Terminals 12 and 41, 51 and 22 are connected internally (as per BIA GS-ET-19).


	Contact	Contact Form	1			
Model	(door open/ closed detection and lock monitor)		open/ sed ection	Operating pattern	Remarks	
D4SL- □JD□-D□□	1NC/1NO + 2NC/1NO	Lock monitor Door oper detect 42 41 12 52 51 64 63 34	n/closed ction 11	Lock position  42-11 34-33 52-51 64-63 Stroke Operation Key insertion completion position  Extraction completion position	Only NC contact 11-12 has a certified direct opening mechanism.  The terminals 42-11, 33-34, 51-52, and 64-63 can be used as unlike poles.	
D4SL- KD  -D	1NC/1NO + 3NC	Lock monitor Door open detec 42 41 12 52 51 62 61 34	n/closed ction 11	Lock position  42-11 34-33 52-51 62-61 Stroke Operation Key insertion completion position  Extraction completion position	Only NC contact 11-12 has a certified direct opening mechanism.  The terminals 42-11, 33-34, 51-52, and 62-61 can be used as unlike poles.	
D4SL- □LD□-D□□	2NC + 2NC/1NO	Lock monitor Door open detec 42 41 12 52 51 64 63 32		Lock position  42-11 32-31 52-51 64-63 Stroke Operation Key insertion completion position  Extraction completion position	Only NC contacts 11-12 and 31-32 have a certified direct opening mechanism.  The terminals 42-11, 33-34, 51-52, and 64-63 can be used as unlike poles.	
D4SL- MD  -D  -	2NC + 3NC	Lock monitor Door open detec 42 41 12 52 51 62 61 32		Lock position  42-11 32-31 52-51 62-61 Stroke Operation Key insertion completion position  Extraction completion position	Only NC contacts 11-12 and 31-32 have a certified direct opening mechanism.   The terminals 42-11, 33-34, 51-52, and 62-61 can be used as unlike poles.	
D4SL-	2NC/1NO + 2NC/1NO	Lock monitor Door oper detect 42 41 12 52 51 22 64 63 34		42-11 52-21 34-33 64-63 Stroke Operation Key insertion completion position  Extraction completion position	Only NC contacts 11-12 and 21-22 have a certified direct opening mechanism.  The terminals 42-11, 52-21, 34-33, and 64-63 can be used as unlike poles.	
D4SL- □PD□-D□□	2NC/1NO + 3NC	Lock monitor Door open detec 42 41 12 52 51 22 62 61 34		Lock position  42-11 52-21 34-33 62-61 Stroke Operation Key insertion completion position  Extraction completion position	Only NC contacts 11-12 and 21-22 have a certified direct opening mechanism.   The terminals 42-11, 52-21, 34-33, and 62-61 can be used as unlike poles.	
D4SL- QDD-DDD	3NC + 2NC/1NO	Lock monitor Door open detec 42 41 12 52 51 22 64 63 32		Lock position  42-11  52-21  32-31  64-63  Stroke  Operation Key insertion completion position  Extraction completion position	Only NC contacts 11-12, 21-22, and 31-32 have a certified direct opening mechanism.   The terminals 42-11, 52-21, 32-31, and 64-63 can be used as unlike poles.	
D4SL- □RD□-D□□	3NC + 3NC	Lock monitor Door open detec 42 41 12 52 51 22 62 61 32		Lock position  42-11 52-21 32-31 62-61 Stroke Operation Key insertion completion position  Extraction completion position	Only NC contacts 11-12, 21-22, and 31-32 have a certified direct opening mechanism.   The terminals 42-11, 52-21, 32-31, and 62-61 can be used as unlike poles.	

#### **Structure**

#### D4SL-□□D□-D4N Connector Model


#### D4SL-□□D□-D4 Terminal Block Model D4SL-□NDA and D4SL-□NDG

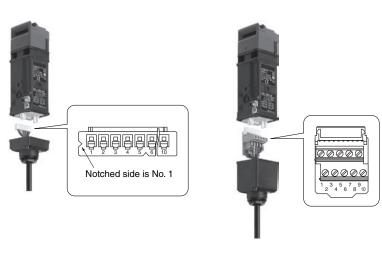



**Note:** Numbers inside the boxes indicate terminal numbers printed on the product.


#### D4SL-□JDG



**Note:** Numbers inside the boxes indicate terminal numbers printed on the product.

#### **Operating Cycle Examples for Standard Models**

D4SL-□□DA-D4□ (Mechanical Lock Models with Special Release Keys)

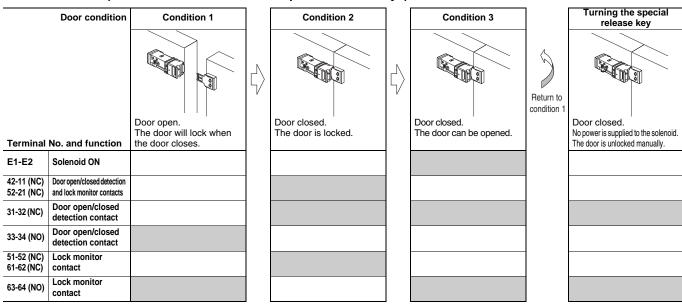

#### D4SL-□□DG-D4□ (Solenoid Lock Models with Special Release Keys)

	Door condition	Even when the door is closed,		Door closed.		Door closed.
Terminal No. and function		it does not lock until power is supplied to the solenoid.		The door is locked.		The door can be opened.
Terminai	No. and function	supplied to the solehold.				
E1-E2	Solenoid ON					
42-11 (NC) 52-21 (NC)	Door open/closed detection and lock monitor contacts					
31-32 (NC)	Door open/closed detection contact					
33-34 (NO)	Door open/closed detection contact					
51-52 (NC) 61-62 (NC)	Lock monitor contact					
63-64 (NO)	Lock monitor contact					
	The shaded areas i	indicate the contact is closed	and	power is supplied to the sole	noid.	

Door open/closed detection and lock monitor contacts: Can be used in safety circuits because of the direct opening mechanisms.

Door open/closed detection and lock monitor contacts: Can be used in safety circuits because of the direct opening mechanisms.

Door open/closed detection contact : Can be used to confirm whether the key is inserted and to monitor the open/closed status of a door.

: Can be used to confirm whether power is supplied to the solenoid and to monitor whether or not a door can be opened or closed.


Lock monitor contact : Can be used to confirm whether power is supplied to the solenoid and to mon **Note: 1.** The door open/closed detection and lock monitor contact configuration depends on the model.


2. If a current is detected in the solenoid lock model (built-in switches; N,P,Q,R), before the door is closed, the door will remain unlocked. Be sure to supply power to the solenoid after the door is closed.

#### **Dimensions and Operating Characteristics**

(unit: mm)

#### **Switches**

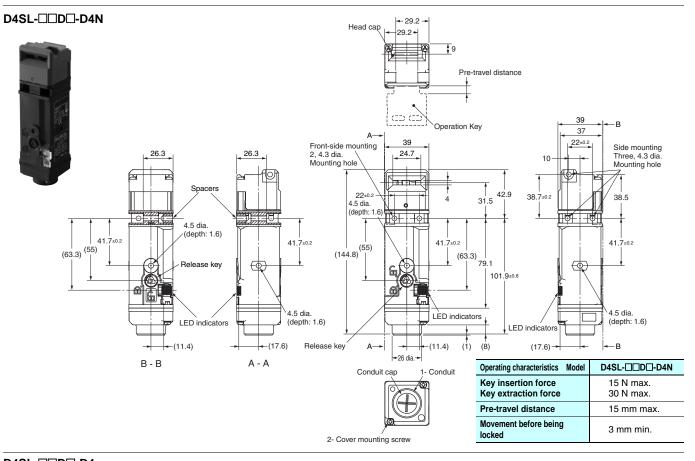

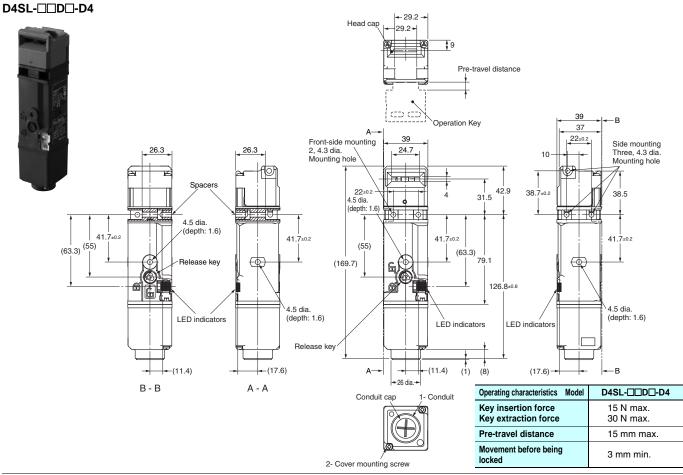


Note: Unless otherwise specified, a tolerance of ±0.4 mm applies to all dimensions.

#### **Operation Key**


#### D4SL-K1



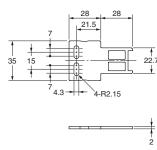


#### D4SL-K1S



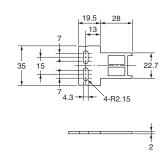


D4SL-K1G



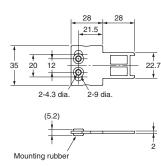


D4SL-K2

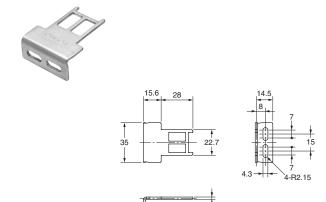


D4SL-K2G



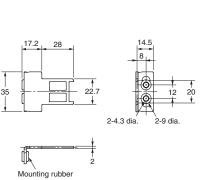


D4SL-K3

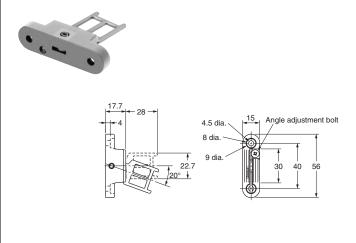

Note: Unless otherwise specified, a tolerance of  $\pm 0.4$  mm applies to all dimensions.

#### **Connector Cable**

#### D4SL-CN□




Model	L size
D4SL-CN1	1m
D4SL-CN3	3m
D4SL-CN5	5m


Connector No.	Lead wire color	Connector No.	Lead wire color
1	Black	6	Green/White
2	Black/White	7	Yellow
3	Red	8	Yellow/White
4	Red/White	9	Brown
5	Green	10	Brown/White

#### **Operation Key Mounting**


# D4SL + D4SL-K1 (with Front-inserted Operation Key)

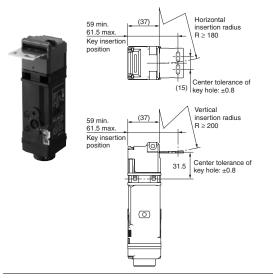


D4SL + D4SL-K1 (with Top-inserted Operation Key)

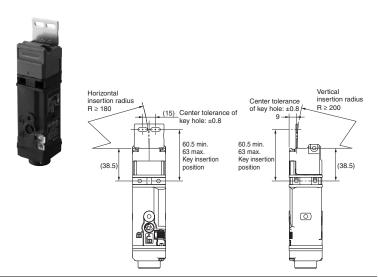


D4SL + D4SL-K1S (with Front-inserted Operation Key)

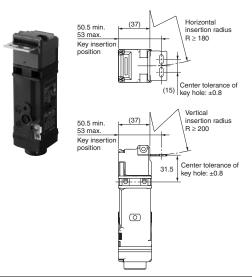


D4SL + D4SL-K1S (with Top-inserted Operation Key)

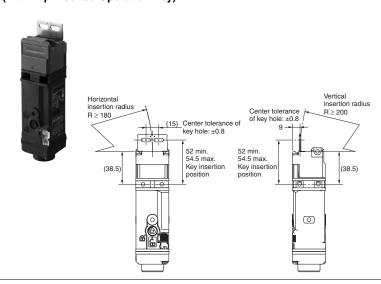

D4SL + D4SL-K1G (with Front-inserted Operation Key)

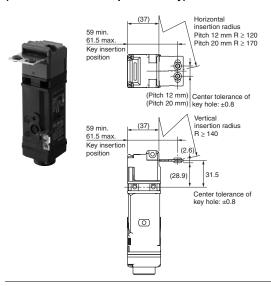

D4SL + D4SL-K1G (with Top-inserted Operation Key)

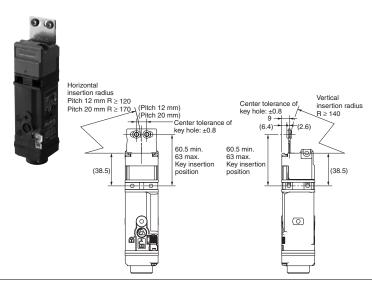

D4SL + D4SL-K2 (with Front-inserted Operation Key)

53.1 min.
55.6 max.
Key insertion position


53.1 min.
55.6 max.
Key insertion position

53.1 min.
55.6 max.
Key insertion position


Center tolerance of key hole: ±0.8

Center tolerance of key hole: ±0.8


D4SL + D4SL-K2 (with Top-inserted Operation Key)

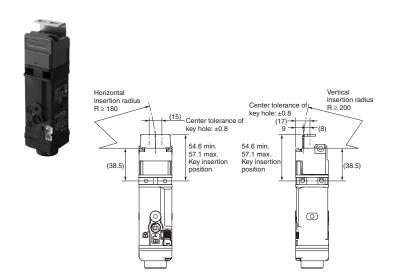


D4SL + D4SL-K2G (with Front-inserted Operation Key)

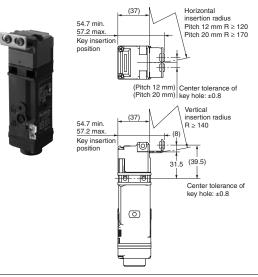


D4SL + D4SL-K2G (with Top-inserted Operation Key)

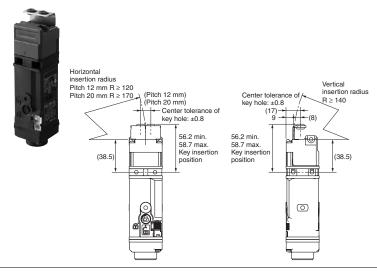

D4SL + D4SL-K3 (with Front-inserted Operation Key)

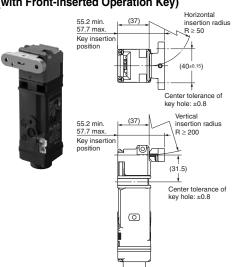


D4SL + D4SL-K3 (with Top-inserted Operation Key)

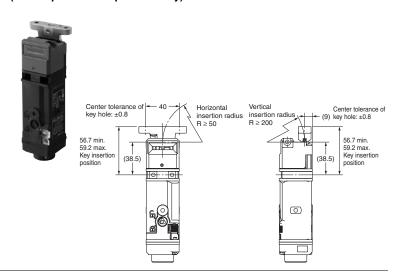


#### **Application Examples**

#### G9SA-321-T□ (24 VAC/VDC) + D4SL-□□DA-D4□ (Mechanical Lock Type) Circuit Diagram (Manual Reset)

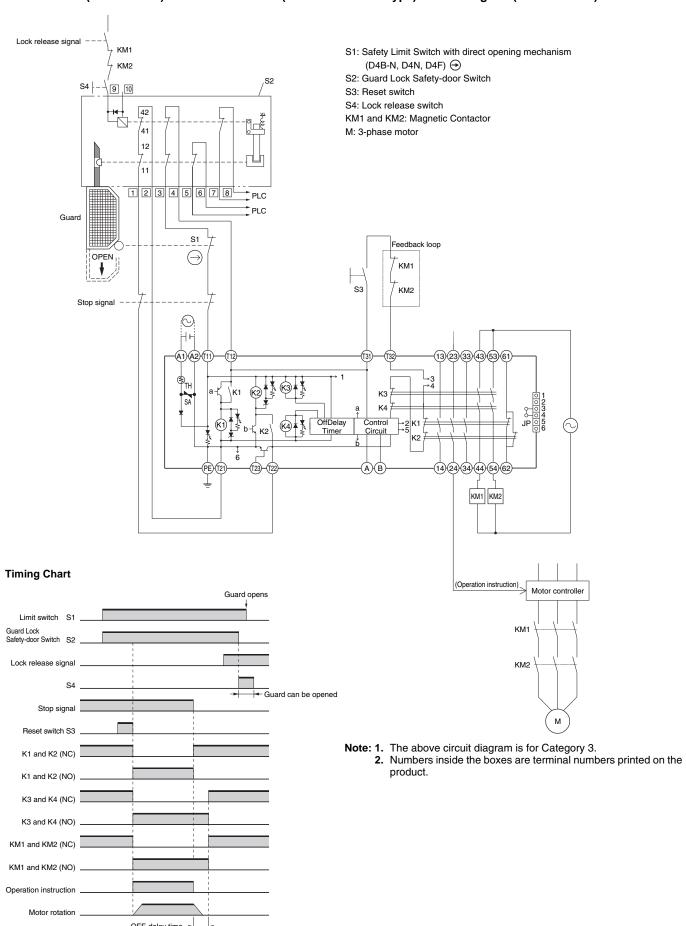

#### G9SA-301 (24 VAC/VDC) + D4SL-□□DG-D4□ (Solenoid Lock Type) Circuit Diagram (Auto-reset)

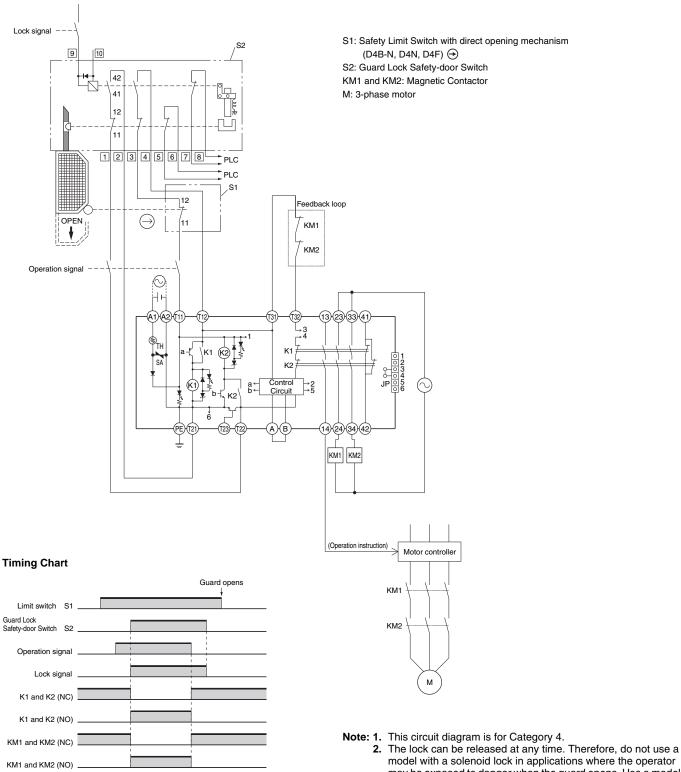

- model with a solenoid lock in applications where the operator may be exposed to danger when the guard opens. Use a model with a mechanical lock.
- 3. Numbers inside the boxes are terminal numbers printed on the product.

#### **Safety Precautions**

Refer to the "Precautions for All Switches" and "Precautions for All Safety Door Switches".

#### **⚠** DANGER

Injury may occasionally occur. Always check to make sure that the safety functions operate correctly before using the machine. The safety functions may not operate correctly because of wiring mistakes, setting mistakes, or Switch malfunction, causing some machines to continue operating in situations where they should be stopped.

#### **⚠** CAUTION

Injury may occasionally occur. When the Switch function is damaged, some machines may continue operating in situations where they should be stopped.

Do not impose a force exceeding the key holding force. Always provide a lock separate from the Switch, attach a warning seal to avoid excessive force applied to the Switch, or provide an indicator lamp to show the locked/unlocked status of the door.

#### **Precautions for Safe Use**

#### **Operating Environment**

Do not use the Switch submersed in oil or water or in locations continuously subject to splashes of oil or water. Doing so may result in oil or water entering the Switch. (The IP67 degree of protection of the Switch specifies the amount of water penetration after the Switch is submerged in water for a certain period of time.)

#### Wiring

- Do not switch circuits for three or more standard loads (125 VAC, 1 A). Doing so may adversely affect insulation performance.
- Do not allow the load current to exceed the rated value.
- For metal connector, use a connector with the screw length of 9 mm or less. Otherwise it may result in electric shock.
- Do not use metallic conduits. In the event of damage to the conduit opening, this may cause seal failure and may result in electric shock.
- Do not use a metal connector for a 1/2-14NPT connector. In the event of damage to the conversion adapter, this may cause seal failure and may result in electric shock.
- Always attach the cover after completing wiring and before using the Switch. Do not supply power when the cover is not attached.
   Electric shock may occur if the Switch is used without the cover attached.
- When using the terminal block type, make sure that foreign material does not adhere to the terminal block board. Otherwise a short circuit may occur between terminals and safety functions may fail to work properly.


#### Installation

- Make sure the Switch is mounted securely to prevent it from falling off. Otherwise injury may result.
- Do not use a Switch as a stopper.

  Be sure to install a stopper as shown in the following illustration so that the Operation Key does not touch the head.

  Be at a bigget the Coult the teach as the strategy of the stra

Do not subject the Switch to a shock that exceeds the Switch's shock resistance of 1,000 m/s<sup>2</sup>.




#### **Precautions for Correct Use**

#### **Solenoid Lock Models**

- If a current is detected in the solenoid lock model (built-in switches; N,P,Q,R), before the door is closed, the door will remain unlocked.
   Be sure to supply power to the solenoid after the door is closed (after the Operation Key is inserted).
- The solenoid lock locks the door only when power is supplied to the solenoid. Therefore, the door will be unlocked if the power supply to the solenoid stops. Therefore, do not use solenoid lock models for machines that may be operating and dangerous even after the machine stops operating.

#### Release Key

- The release key is used to unlock the Switch in case of emergency or if the power supply to the Switch stops.
- If the release key setting is changed from LOCK to UNLOCK, the lock will be released and the safety door can be opened (mechanical lock models only).

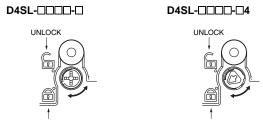

- After setting the release key to UNLOCK to, for example, perform maintenance, be sure to return it to LOCK setting before resuming operation.
- The release key is set in the unlock position at the factory for the D4SL-\(\sigma\) A and to the lock position for the D4SL-\(\sigma\).
- In the unlock position, even when the door of large machines or stamping machines is closed during preliminary adjustment, the door will remain unlocked and the machines will not be activated.
- Do not use the release key to start or stop machines.
- The auxiliary lock must be released only by authorized personnel.
- Do not impose a force exceeding 0.2 N·m on the release key screws. The release key may be damaged and may not operate properly.
- To prevent the release key from being used by unauthorized personnel, set it to LOCK and seal it with sealing wax.

#### **Mounting Covers**

 Confirm that the seal rubber has no defects before use. If the seal rubber is displaced or raised, or has foreign particles adhered to it, the sealing capability of the seal rubber will be adversely affected.

#### **Hinged Door**

If the Switch is mounted too close to the hinge, the force imposed on the lock will be much larger than for locations far from the hinge and the lock may be damaged. Mount the Switch close to the handle.

#### Mounting

#### **Appropriate Tightening Torque**

Loose screws may result in malfunction. Tighten the screws to the specified torques.

Cover mounting screw	0.4 to 0.5 N·m	
Operation Key	2.4 to 2.8 N⋅m (D4SL-K□, -K□S)	
mounting screw	0.75 to 1.15 N⋅m (D4SL-K□G)	
Switch mounting screw	0.75 to 1.15 N·m	
Connector	1.8 to 2.2 N·m (except 1/2-14NPT)	
Connector	1.4 to 1.8 N·m (for 1/2-14NPT)	
Terminal screw * Terminal block type only.	0.5 to 0.6 N·m (D4SL-□□□□-□□)	


#### **Switch and Operation Key Mounting**

 Mount the Switch and Operation Key securely to the applicable tightening torque with M4 screws. Always use washers.

#### Switch mounting

# 2-M4 22=0.1 Side 38.7=0.1 3-M4


#### **Operation Key mounting**

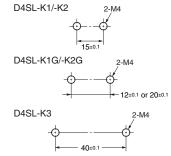

- Ensure that the alignment offset between the Operation Key and the key hole does not exceed ±0.8 mm.
   If the Operation Key is offset or at an angle, accelerated wear or damage to the Switch may result.
- Observe the specified insertion radius for the Operation Key and insert it in a direction perpendicular to the key hole.
- Mount a provided cap head to an unused Operation Key hole.
- Perform 3-point mounting including the head for side mounting.


#### Securing the Door


When the door is closed (with the Operation Key inserted), the Operation Key may exceed the set zone because of, for example, the door's own weight, machine vibration, or the door cushion rubber. Secure the door with a stopper (hook) so that the Operation Key remains within the set zone.



#### Spacer

Do not remove a spacer. Rotate the spacer in accordance with the Switch mounting direction. Use of the Switch without spacer will reduce the lock strength.






#### Wiring


#### **Circuit Connection Example**

- Direct opening contacts used as safety-circuit inputs are indicated with the mark. Terminals 11-42, and terminals 21-52 have direct opening contacts.
- DC solenoids have polarity. (E1: +, E2: -) Confirm terminal polarity before wiring.
- The current of the 24 VDC solenoid is different from when it is first turned ON as to when it is in operation. To take into account possible voltage drops, it is important to apply a rated operation voltage.
- To enable the 24 VDC solenoid, it is necessary to select the appropriate power supply capacity.
- The ON and OFF contact operation will not engage simultaneously. Be sure to confirm operation under actual operating conditions.

#### (D4SL-□NDA, D4SL-□NDG)

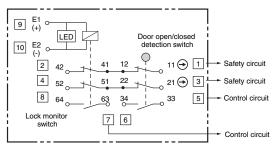


#### (D4SL-□JDG)

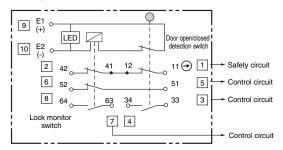

#### Wiring Precautions for D4SL-

- Do not wire the Switch while power is being supplied. Doing so may result in electric shock.
- Do not let particles, such as small pieces of lead wire, enter the switch body when wiring.
- Do not directly wire the stranded wire to the terminal block.
- When connecting to the terminals via insulating tube and bar terminals, arrange the bar terminals so that they do not rise up onto the case or the cover.
- Applicable lead wire size: AWG22 to AWG18 (0.3 to 0.75 mm²).
- Use lead wires of an appropriate length. Not doing so may result in excess length causing the cover to rise and not fit properly.
- Remove the terminal block board out of the unit to perform wiring.
   Be sure to insert the connector properly.

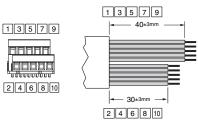

 Do not pull on the lead wires with excessive force. Doing so may disconnect them.

#### **Recommended Crimp Terminals**

Manufacturer	Model	Applicable wire lead
BUOENIN	AI0.34-8 TQ	AWG22
PHOENIX CONTACT	AI0.5-8 WH	AWG20
CONTINUE	AI0.75-8 GY	AWG18


L1: 14 mm max. L2: 8 mm max.



#### Wiring Precautions for D4SL-□□□□-□□N

- Do not wire the Switch while power is being supplied. Doing so may result in electric shock.
- Do not let particles, such as small pieces of lead wire, enter the switch body when wiring.
- Applicable lead wire size: AWG24 to AWG22 (0.2 to 0.3 mm²). Do not apply a current of 2 A or more when using AWG24.
- Use lead wires of an appropriate length. Not doing so may result in excess length causing the cover to rise and not fit properly.





- Do not pull on the lead wires with excessive force. Doing so may disconnect them.
- Do not forcibly insert the wired socket at the cable side into the connector or D4SL's conduit opening. Doing so may cause cable break.

Be sure to insert the cable into the connector or D4SL's conduit opening before performing wiring to the socket, or insert the cable into the connector or conduit opening from the opposite side of the socket.

#### Applicable socket for cable side

Manufacturer	Name	Model
	Housing	XHP-10
J.S.T. Mfg Co.	Contact (applicable wire lead: AWG24 to AWG22)	SXH-001T-P0.6

#### **Processing the Conduit Opening**

- Connect a recommended connector to the opening of the conduit and tighten the connector to the proper torque. The case may be damaged if excessive tightening torque is applied.
- Use the cable with the connector-specified outside diameter.
- For the 1/2-14NPT conduit, mount a provided conversion adapter to use the connector above.

#### **Recommended Connectors**

Use a connector with a screw section not exceeding 9 mm.
 Otherwise the screws will protrude into the case interior. The connectors given in the following table have connectors with screw sections not exceeding 9 mm.

Use the following connectors to ensure conformance to IP67.

	Size	Manufacturer	Model	Applicable cable diameter	Remarks
-	G1/2	LAPP	ST-PF1/2 5380-1002	6.0 to 12.0 mm	
	G1/2	Ace Service Co.	LS-2G	6.0 to 11.0 mm	Short type
	M20	LAPP	ST-M20X1.5 5311-1020	7.0 to 13.0 mm	
-	1/2- 14NPT	LAPP	ST-NPT1/2 5301-6030	6.0 to 12.0 mm	

Use LAPP connectors together with Seal Packing (JPK-16 for G1/2, or GPM20 for M20), and tighten to the applicable torque. Seal Packing is sold separately.

- LAPP is a German manufacturer.
- Ace Service Co. is a Japanese manufacturer.

#### READ AND UNDERSTAND THIS CATALOG

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

#### **Warranty and Limitations of Liability**

#### WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

#### LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

#### **Application Considerations**

#### **SUITABILITY FOR USE**

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the product.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- · Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this document.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

#### **Disclaimers**

#### **CHANGE IN SPECIFICATIONS**

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the product may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

#### **DIMENSIONS AND WEIGHTS**

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

#### **ERRORS AND OMISSIONS**

The information in this document has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

#### **PERFORMANCE DATA**

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

#### **PROGRAMMABLE PRODUCTS**

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

### **Copyright and Copy Permission**

#### **COPYRIGHT AND COPY PERMISSION**

This document shall not be copied for sales or promotions without permission.

This document is protected by copyright and is intended solely for use in conjunction with the product. Please notify us before copying or reproducing this document in any manner, for any other purpose. If copying or transmitting this document to another, please copy or transmit it in its entirety.

OMRON Corporation Industrial Automation Company

Tokyo, JAPAN

Contact: www.ia.omron.com

Regional Headquarters
OMRON EUROPE B.V.

Wegalaan 67-69-2132 JD Hoofddorp The Netherlands Tel: (31)2356-81-300/Fax: (31)2356-81-388

OMRON ASIA PACIFIC PTE. LTD.

No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011/Fax: (65) 6835-2711 OMRON SCIENTIFIC TECHNOLOGIES INC.

6550 Dumbarton Circle, Fremont CA 94555-3605 U.S.A. Tel: (1) 510-608-3400/Fax: (1) 510-744-1442

OMRON (CHINA) CO., LTD. Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road,

200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200 **Authorized Distributor:** 

© OMRON Corporation 2009-2012 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice.

CSM\_4\_1\_0312 Printed in Japan Cat. No. C143-E1-01 0412